




AEG

GOOGLE ASSISTANT INSTRUCTIONS

! Before using the app or voice control, remote control must be enabled on the appliance. Therefore, press once on 'Delayed start' and immediately after on 'Start/Pause'.



&

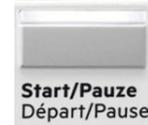

You can customise the name of the appliance in Google Home and use this name for your commands.

Try following phrases:

Start/Turn on

"Hey Google, start/turn on the [washing machine/dryer]"

"Hey Google, start/turn on my [washing machine/dryer]"

"Hey Google, start/turn on [washing machine/dryer]"

Pause/Resume

"Hey Google, pause/resume the [washing machine/dryer]"

"Hey Google, pause/resume my [washing machine/dryer]"

"Hey Google, pause/resume [washing machine/dryer]"

Stop/Turn off

"Hey Google, stop/turn off the [washing machine/dryer]"

"Hey Google, stop/turn off my [washing machine/dryer]"

"Hey Google, stop/turn off [washing machine/dryer]"

Set temperature

"Hey Google, set the [washing machine/dryer] (temperature) to 40 (degrees)"

"Hey Google, increase/decrease the [washing machine/dryer] temperature"

Check the status

"Hey Google, what is the status of the [washing machine/dryer]?"

Check remaining time

"Hey Google, when will the [washing machine/dryer] finish?"